

# A a rapid<br/>D light5.Two cartridge directions6.Quick Release Latch<br/>There is a quick release latch on the HIGhkey<br/>for you to easily connect it to your keychain.<br/>(Patent pending)in the<br/>Sou can<br/>ower button<br/>show theFor all sizes of cartridge0 Push the button to the left.in the<br/>Sou can<br/>ower button<br/>show theFor all sizes of cartridge0 Push the button to the left.in the<br/>Sou can<br/>ower button<br/>show theFor all sizes of cartridge0 Push the button to the left.in the<br/>Sou can<br/>ower button<br/>show theFor all sizes of cartridge0 Push the button to the left.in the<br/>Sou can<br/>ower button<br/>show theFor all sizes of cartridge0 Push the button to the left.in the<br/>Sou can<br/>ower button<br/>show theFor all sizes of cartridge0 Push the button, pull the<br/>latch up.

How to use

# 1.Power On/Off

Press the power button 5 times in a rapid succession to turn on/off, the LED light will flash 5 times.

### 2.Preheat

Turn on the device and press the power button two times rapidly for a 15 seconds preheat(2.0V).Press the button once to stop. In the preheat mode,the LED light will turn red-green-blue.

# 3.Variable Voltage

There are four voltage settings in the HIGHkey,2.8V/3.2V/3.6V/4.0V.You can change voltage by pressing the power button 3 times rapidly.The display will show the voltage.

# 4.Charge

After plugging the charger into the HIGHkey, a red light will turn on. When it is fully charged, the light will flash 20 times, then turn off.